

ENGINEERING STANDARDS

Rosedale Products, Inc.
3730 West Liberty Road
Ann Arbor, MI 48103

7_5_4 Hydraulic Cover Lift
Installation
n:\iom\updated ioms



Issue Date: 28MAY96
Revision: 0
Revision Date:

Specification No.
7.5.4
PAGE: 1 of 1

MANUAL HYDRAULIC COVER LIFT INSTALLATION

Installation Instructions

1. Remove 3/4" MNPT Adapter w/set screw from end of Hydraulic Cylinder.
2. Slide Hydraulic Cylinder through Polypropylene Insert located in the Lifting Guide.
3. Replace 3/4" MNPT Adapter w/set screw. Thread the Adapter into the 3/4" NPT coupling located on the cover.
4. Slide the bottom of the Hydraulic Hand Pump into the tabs located at the bottom of the Mounting Bracket. Align the slots, at the top of the pump, with the holes at the top of the Mounting Bracket. Attach with the hardware provided.

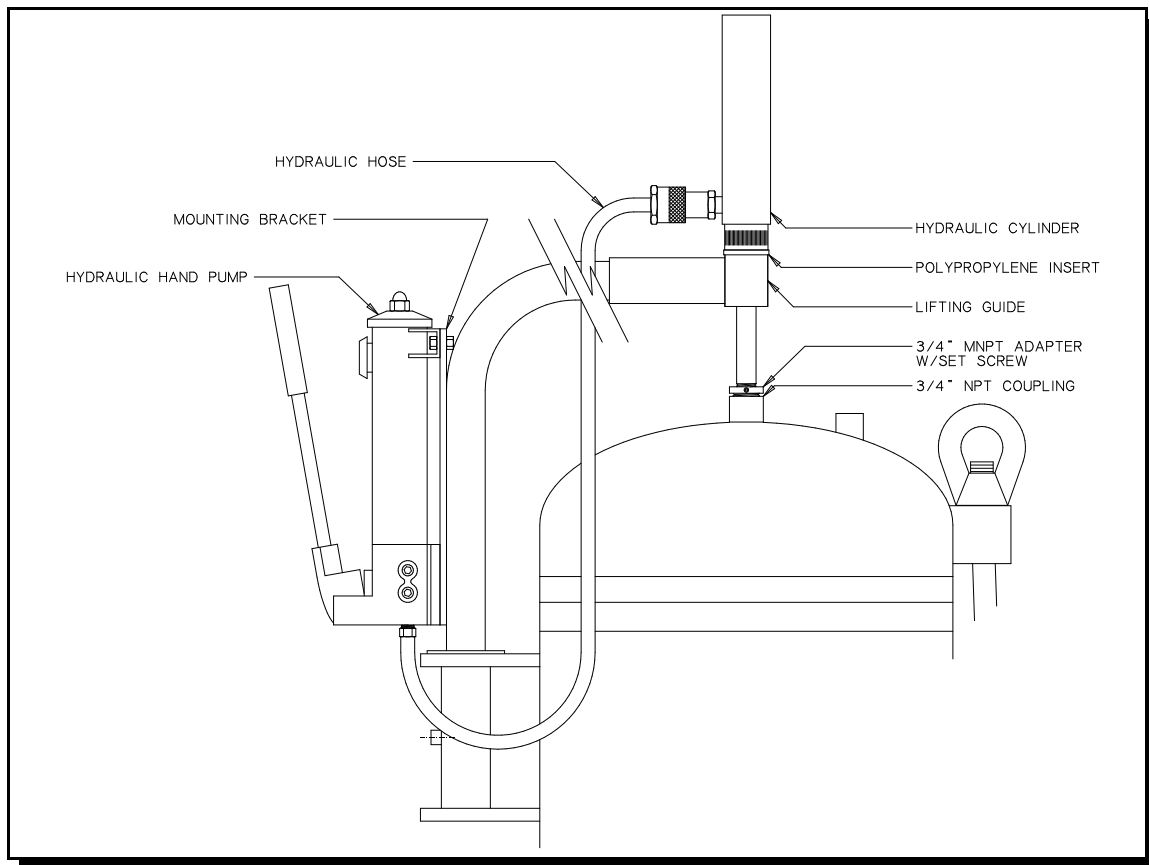


Figure 1 Typical Multibag-basket Layout